

Delivery Time (in days)	Flow Rate	Fill Volume
2	1 ml/hr	50 ml
2	2 ml/hr	100 ml
2	3 ml/hr	150 ml
2	4 ml/hr	200 ml
2	5 ml/hr	250 ml
2	6 ml/hr	300 ml
3	1 ml/hr	75 ml
3	2 ml/hr	150 ml
3	3 ml/hr	225 ml
3	4 ml/hr	300 ml
3	5 ml/hr	375 ml
3	6 ml/hr	450 ml
4	1 ml/hr	100 ml
4	2 ml/hr	200 ml
4	3 ml/hr	300 ml
4	4 ml/hr	400 ml
4	5 ml/hr	500 ml
5	1 ml/hr	125 ml
5	2 ml/hr	250 ml
5	3 ml/hr	375 ml
5	4 ml/hr	500 ml
6	1 ml/hr	150 ml
6	2 ml/hr	300 ml
6	3 ml/hr	450 ml
7	1 ml/hr	175 ml
7	2 ml/hr	350 ml





Manufacturer:
MFS Medical Flow Systems Ltd.
P.o.Box 26
Shlomi 22832, Israel
Tel: +972 4 980 8280
Fax: +972 4 987 5565
Web: www.mfs-medical.com

C4802 Rev.1

SmartInfuser™

PROGRAMMABLE MECHANICAL PUMP
Customize the pump's settings to match each individual patient's needs

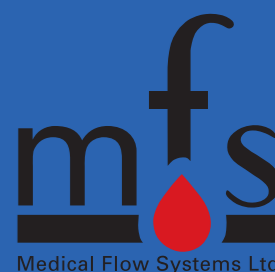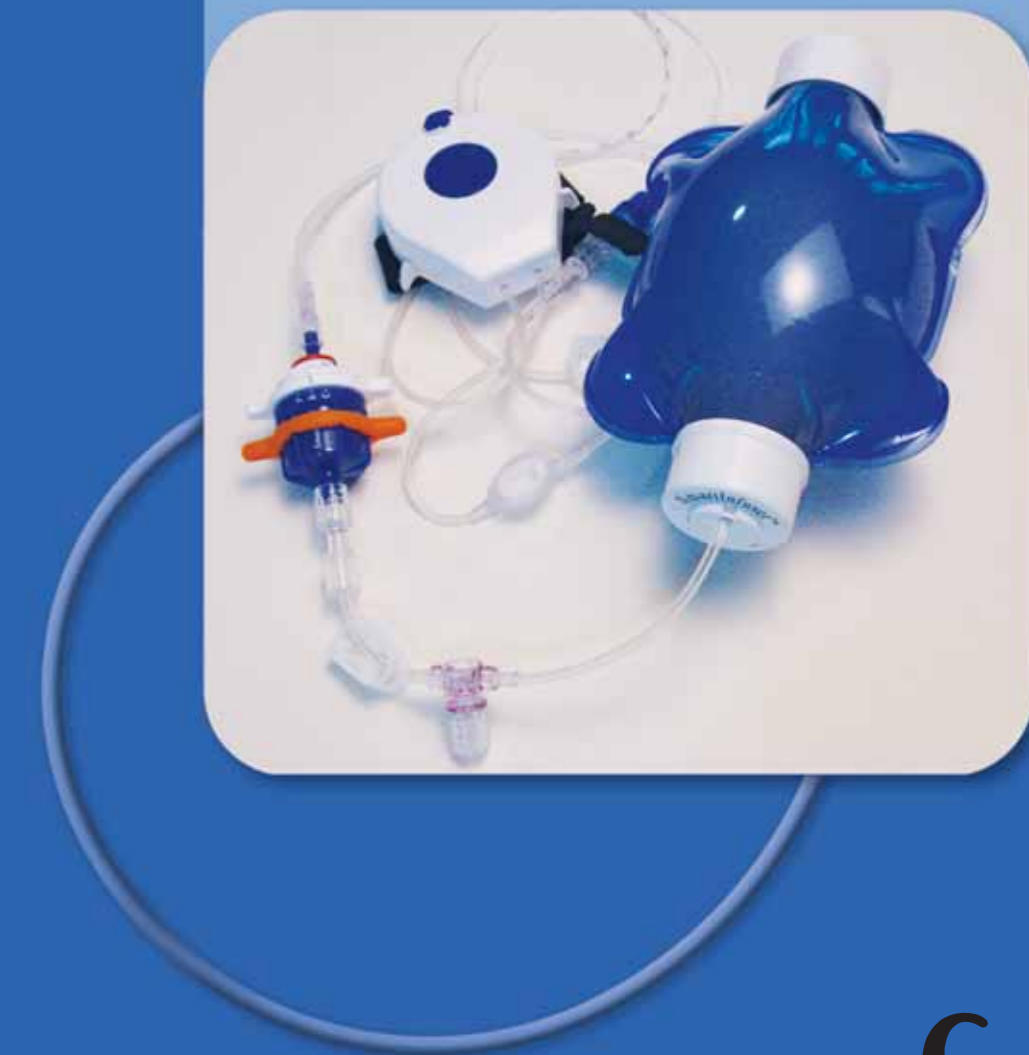

A

When installing the pump

Set each and any of the pump's settings to obtain the best match for the patient's pain therapy requirements.



1 Reservoir - fill with ANY volume up to 500 ml.

- Remove the cap from the designated check valve.
- Fill the desired volume by using the disposable syringe.
- Place the cap back on the check valve.

Warning: Use aseptic technique.



2 Flow rate - select and secure ANY flow rate within the regulator range.

- Place the regulator at "R" position.
- Dial the white Adjusting Ring to the required flow rate (digits represent ml/hr).
- Push in the Adjusting Ring to the secured position.

Note: Once the Adjusting Ring has been pushed into the secured position the Priming feature is locked and can not be re-activated.



3 Bolus - select ANY volume in the range of 0 to 5 ml.

- Use the Lever to dial and select the required bolus volume.
- Turn the Lock 180° clockwise to secure the selected volume.

B

During the Course of Hospitalization

Reset any of the pump's settings to more effectively address changes in the patient's pain therapy requirements.



1 Reservoir - when needed Add more anesthetic solution to the reservoir.

- Remove the cap from the designated check valve.
- Fill the added volume by using a disposable syringe.
- Place the cap back on the check valve.

Warning: Use aseptic technique.



2 Flow rate - Re-select flow rate.

- Pull out the white Adjusting Ring from the secure setting.
- Dial to select the new required flow rate.
- Push in the Adjusting Ring into the secure setting.



3 Bolus - Re-select volume.

- Turn the Lock 180° counter-clockwise to release the volume Lever.
- Use the Lever to dial and select the new required volume.
- Turn the Lock 180° clockwise to secure the new selected volume.

C

Before Releasing the Patient

Lock the pump's settings to avoid unauthorized manipulation.



1 Reservoir - when needed Add more anesthetic solution to the reservoir.

- Remove the cap from the designated check valve.
- Fill the added volume by using the disposable syringe.
- Place the cap back on the check valve.

Warning: Use aseptic technique.



2 Flow rate - Lock the selected flow rate.

- Push in the red Locking Sleeve to locked position.

Note: Once the Locking Sleeve is in the locked position the flow rate can not be manipulated.



3 Bolus - Lock the selected volume.

- Push the lock downward to permanently lock the bolus volume.